

Hydro User Manual

ICEMOBILE

www.icemobile.net

CONTENTS

Remarks:	2
1. Introductions	2
1.1 INFORMATIONS:	2
2. Before using	2
2.1 Keys description	2
2.2 Functions of keys	3
2.3 Battery	3
2.4 Installing the SIM Cards and the Battery	3
2.5 Charging the battery	3
2.6 Connecting to the network	3
2.6.1 SIM card	3
2.6.2 Unlocking the SIM card	3
2.6.3 Making and receiving calls	5
3. FUNCTION MENU	5
3.1 Powering your phone on/off	5
3.3 Locking and Unlocking the Keypad	5
3.4 Text Input	5
3.5 Adding contact to the Phonebook	5
3.6 Making and receiving calls	6
3.7 Sending and receiving messages	6
3.8 Profiles	6
3.9 Call center	6
3.10 Setting your phone	6

3.11 How to take a photo	7
3.12 How to play music	7
3.13 How to use FM radio	7
3.14 Using Services	7

Remarks :

It is a floatable phone and not 100% waterproof. So please avoid bring in the deep of water.

1. Introductions

1.1 INFORMATIONS:

Thank you for choosing our mobile phone. With this user manual, you can understand the operation of the mobile phone and enjoy its perfect function and simple operation. This phone is designed for GSM network. Besides basic messages function, it also provides various practical functions, including alarm, calendar, FM radio, calculator and slide key, to make your work and entertainment more convenient. In addition, the phone utilizes personalized human-computer interface and satisfies your different requirements with its perfect functions.

2. Before using

2.1 Keys description



2.2 Functions of keys

Left soft key	Performs the function indicated at the left bottom of the screen
Right soft key	Performs the function indicated at the right bottom of the screen
Centre key	Press to enter the main menu
Message key	Quick access to message function menus
Audio player key	Quick access to Audio player function menus
4-Way Navigation keys	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus
Send key	Press to dial a phone number or answer a call, or

	view the call history
End/Power key	Press to end a call. Press to exit to the idle mode. Hold to switch on/off the phone.
numeric keys	Press to enter characters or alphabets, etc.

Note: In this User Manual, "press" means to press a key and release it, while "hold" means to press the key for at least two seconds and then release it.

2.3 Battery

The battery in original state has about 50% electricity and you can use it after unpacking. It performs best after full charge/discharge for the first three times.

2.4 Installing the SIM Cards and the Battery

Hold the End key for a while to power off the mobile phone. Push the back cover above the battery and remove it.

Pull the left battery buckle outward and then lift the battery away.

Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing down, till the SIM card cannot be further pushed in.

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

2.5 Charging the battery

Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen. When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low. A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

2.6 Connecting to the network

2.6.1 SIM card

Please insert a valid SIM card (user identification card) into the phone before using it. SIM card is the key for you to enter digital GSM network. Inside the battery compartment you can see SIM card slot then insert your SIM card.

2.6.2 Unlocking the SIM card

By setting PIN1 (personal identification number) code of SIM card and handset lock code, you can protect your SIM card and phone from illegal use. When this function is put in

use, you have to enter PIN1 code each time you power on your phone. To unlock the SIM card before you dial or receive calls, You may cancel the SIM card protection (referring to chapter “Security setup”), and in this case, the SIM card will be unable to prevent illegal use.

- n Press the END key to power on the phone.

- n Enter PIN1 code use the right soft key to clear the incorrect input. If you enter a wrong PIN1 code for three times in a row, your SIM card will be locked by network and the phone will ask for PUK code. If you don't know the PUK code, do not enter any code and send your SIM card to the operator. Details can be referred to in chapter “Security setup”

2.6.3 Making and receiving calls

In the standby interface, press number keys to input the area code and the telephone number, and then press the OK key to dial a call. To end the call, press the End key.

3. FUNCTION MENU

3.1 Powering your phone on/off

Make sure that the SIM card is in your device and the battery is charged.

Hold the End/Power key to power on/off the phone.

3.2 Turning the torch on/off

In the idle screen, hold the Right soft key can turn on or off the torch.

3.3 Locking and Unlocking the Keypad

In idle screen, press the left soft key and then press the *key with two seconds to lock the keypad. The unlock method is the same. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

3.4 Text Input

- n Press the # key to change the input modes.

- n Press the * key to Select the specific symbols

- n Delete Character: Press the Right soft key to clear a character. Hold the Right soft key to delete all characters.

- n Move cursor to left or right: Among the text, press the Left/Right navigation keys to move the cursor to left or right.

3.5 Adding contact to the Phonebook

You can save numbers to your Phonebook. Access these numbers quickly and easily.

1. Go to Menu>Phonebook>Add new contact.
2. Edit the information and save it.

3.6 Making and receiving calls

The most basic way to make a call is to input the number in the standby mode and press the Send key. You can also make a call from the Phonebook list.

n To call someone: Go to Menu> Phonebook. Use the Up/Down keys to find the name of the person you want to call, and press the Send key.

n To receive a call, press the Send key.

n To end or reject a call, press the End/Power key.

3.7 Sending and receiving messages

You can use your mobile phone to send and receive messages.

n Send a message

1. Go to Menu>Messaging>Write message>Text message.

2. Write your message.

3. When you finish writing an SMS, select to send or save the message.

n Receive a message

When you receive a new message, press "View" to open it. You can also go to Inbox to read the message.

3.8 Profiles

Go to Menu>Settings>profiles. You can select Options>Activate to activate a profile. Or you can select Options>Customize to edit a profile.

3.9 Call center

Go to Menu>Call center.

n Call history

Missed calls, Dialed calls and Received calls are saved in Call history. If the records are full, the earliest saved records will be deleted.

Also, you can delete call logs in Call history.

n Call settings

You can set Call waiting, Call divert, Call barring and so on.

3.10 Setting your phone

You can adjust various settings of your phone. Go to Menu>Settings.

n Phone settings: Set Time and date, Language and Display, etc.

n Network settings: Set Network selection, GPRS connection, etc.

- n Security settings: Set security features to protect you from unauthorized use of your phone and SIM card.
 - n Connectivity: Set Bluetooth and Data account.
 - n Restore settings: Input the phone password to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.
- Note: You may be required to input the phone password in some of the security settings interfaces. The default password is 1122.

3.11 How to take a photo

Go to Menu>Multimedia>Camera.

- n To take a photo: aim the camera at the object and then press the Center key to take the shot.
- n Configure camera: press the Left soft key to configure your camera.

3.12 How to play music

Go to Menu>Multimedia>Audio player. You can play the audio in your phone or the memory card.

3.13 How to use FM radio

Go to Menu>Multimedia>FM radio.

With the radio, you can search for radio channels, listen to them, and save them on your device.

Note: please take your handset as the standard.

3.14 Using Services

Go to Menu>Services. In Services you can view internet content.